


## Plier adjustable anvil instructions

Plier tools for carton and bedding applications have a system that permits the adjustment of the jaw width, to tune the staple closure and set up the tool for the working conditions. These are the instructions how to use this system.

### Open the jaw

To increase the distance between the anvil and the tool nose, turn the screw on the top of the tool counterclockwise.

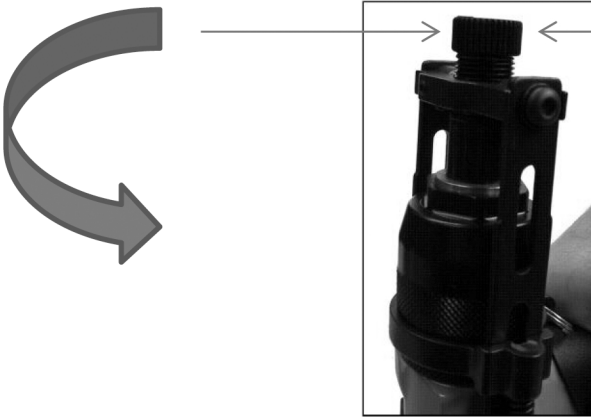

### Close the jaw

To close the distance between the nose and the anvil, turn the screw on top of the tool clockwise.

